

README | LANGUAGE PACK FOR BioStar 2.7.0

INTRODUCTION

BioStar 2 language pack is available for view menus, dialog boxes, and other user interface items in your preferred language. This language pack include multilingual UI files for 2.7.0.

NOTE | This language pack is only for BioStar 2.7.0.

Which language is included?

- Arabic
- Japanese
- Polish
- Russian
- Spanish (Europe)

MORE INFORMATION

How to apply the language pack?


The translated UI of BioStar 2 is managed according to ISO 639-1 and it can be applied in simple ways.

WARNING | Before starting the procedure, please check if you have installed the BioStar 2.7.0.
| If you installed BioStar 2 in another drive, please input that drive letter instead of 'C'.
| If you installed a 32 bit version of BioStar 2, search the folder under "C:\Program Files (x86)".


1. It will consist of files similar to below in each folder.
 - messages_xx.properties
2. Stop the BioStar 2 service in **BioStar Setting**.
3. Copy *messages_xx.properties* file to "C:\Program Files\BioStar 2\nginx\html\resources".
4. Start BioStar 2 service in **BioStar Setting**.
5. Check that the translated material appears in BioStar 2.

How to change the language on BioStar 2?

1. Log in with the administrator account.
2. Click **Setting > PREFERENCE**.

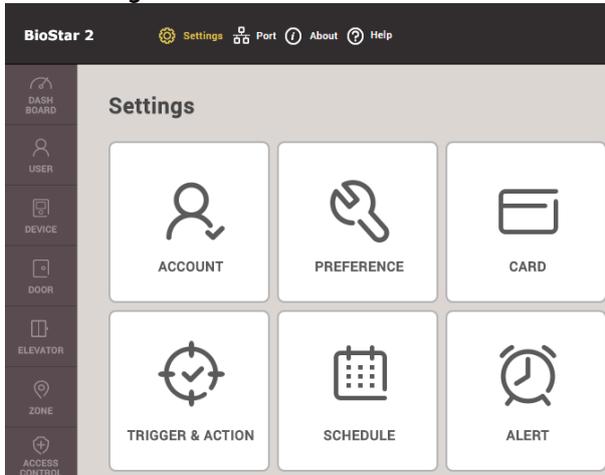

3. Select a language to use in **Language / Time Zone** tab.

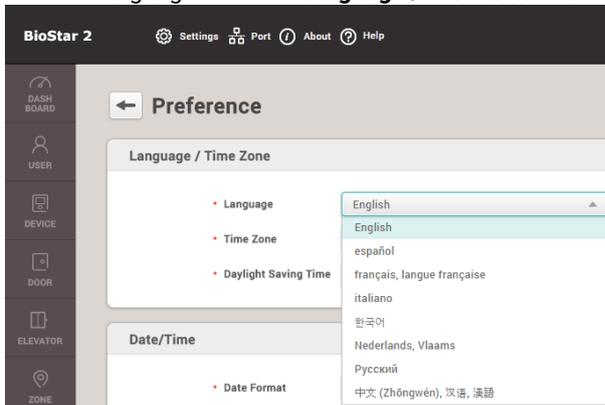

STILL NEED HELP?

For any inquires or technical support concerning BioStar 2, please contact the Suprema Technical Support Team (support.supremainc.com).



Suprema Inc.

17F Parkview Tower, 248, Jeongjail-ro, Bundang- gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA

Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: sales@supremainc.com | www.supremainc.com

©2017 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status and/or specifications are subject to change without notice.