

# BioStation 2

## **USER GUIDE**

Version 1.35  
English

EN 102.00.BS2 V1.35A

# Contents

---

<b>Safety Instructions.....</b>	<b>4</b>
<b>Getting Started.....</b>	<b>6</b>
Components .....	6
Parts .....	7
Cables and connectors .....	9
How to Enroll a Fingerprint.....	11
Choose Ideal Fingers to Enroll .....	11
How to Enroll Fingerprints.....	11
<b>Administrator Menus .....</b>	<b>12</b>
Full Menu .....	12
Quick Menu.....	12
<b>User Management.....</b>	<b>13</b>
Add User Information.....	13
Edit User Information.....	14
Delete All Users .....	14
Check User Usage.....	14
<b>Authentication Configuration .....</b>	<b>15</b>
Finger.....	15
Card.....	15
ID.....	16
T&A Mode .....	16
Fingerprint.....	17
<b>System Setup.....</b>	<b>18</b>
Display & Sound .....	18
Device .....	18
Date & Time.....	18
Daylight Saving Time .....	19
User ID Type.....	19
USB Memory .....	19
Restart Device.....	20
Restore Default.....	20
More Settings .....	21
Network .....	23
TCP/IP Settings .....	23
Server Settings .....	23
RS-485 Settings .....	24
<b>Check Event Log.....</b>	<b>25</b>
Search Logs.....	25
Delete All Logs.....	25
Check Log Usage .....	26
<b>Troubleshooting.....</b>	<b>27</b>
Checklist Before Requesting Service.....	27
<b>Product Specifications.....</b>	<b>28</b>
Dimensions.....	29
<b>FCC Compliance Information.....</b>	<b>30</b>

<b>Appendices .....</b>	<b>31</b>
Disclaimers .....	31
Copyright Notice .....	31
Open Source License .....	31
GNU General Public License.....	31
GNU Lesser General Public License.....	37
OpenSSL License .....	39
Original SSLeay License .....	39

# Safety Instructions

Please read the following instructions carefully before using the product. This information is important for ensuring the safety of the user and for preventing damage to the user's property.

## Warning

Failure to follow the instructions may cause serious injury or death.

### Installation Instructions

**Do not install the product in direct sunlight or in a location that is damp or dusty.**

- This can cause a fire or electric shock.

**Do not install the product near any heat source such as electric heaters.**

- This can cause a fire from overheating or electric shock.

**Install the product in a dry place.**

- Moisture can cause product damage or electric shock.

**Install the product in a place where there is no electromagnetic interference.**

- This can cause product damage or electric shock.

**Have qualified service professionals install or repair the product.**

- Otherwise, it can cause a fire, electric shock, or injury.
- If the product is damaged due to a user's unauthorized installation or dismantling of the product, a service fee will be charged for repair.

### Operating Instructions

**Be careful not to spill any liquid such as water, drinks, or chemicals inside the product.**

- This can cause fire, electric shock, or product damage.

## Caution

Ignoring these instructions may result in minor injuries or damage to the product.

### Installation Instructions

**Protect the power cord from being walked on or pinched.**

- This can cause product damage or injury.

**Keep the product away from strong magnetic objects such as magnets, TVs, monitors (especially CRT monitors), or speakers.**

- This can cause a failure.

**Only use a DC 12V power adapter that provides a current of at least 500mA.**

- This device does not work if the proper power source is not used.

**After all the cables are properly installed, apply the liquid silicone underneath and above the cables within the groove approximately 10mm wide. The cable cover must be installed to ensure the IP65 rating.**

- Non-proper installation of the cable cover may cause device malfunction or damage from water and dust.

**If installing the product outside where the product is completely exposed, it is recommended to install the product together with the enclosure.**

**Use a separate power supply for Secure I/O 2, electric lock and BioStation 2 respectively.**

- If connecting and using the power supply to these devices together, the devices may malfunction.

## Operating Instructions

**Do not drop the product or subject it to shock or impact during use.**

- This can cause a failure.

**Keep the password secret from others and change it periodically.**

- Failure to do so may lead to an illegal intrusion.

**Do not press the buttons on the product with excessive force or with a sharp tool.**

- This can cause a failure.

**Be careful not to contaminate or damage the fingerprint reader with dirty hands or materials.**

- This can decrease performance or cause failures to read fingerprints.

**Clean the product with a soft, dry cloth. Do not use alcohol, benzene, or water.**

- This can cause a product failure.


**BioStation 2 uses the capacitive button. If there is much moisture (humidity) like a rainy weather or on the product, wipe with a soft and dry cloth.**

**There is a risk of fire if batteries are replaced by an incorrect type.**


**Dispose of batteries in accordance with local and national disposal regulations.**

# Getting Started


## Components

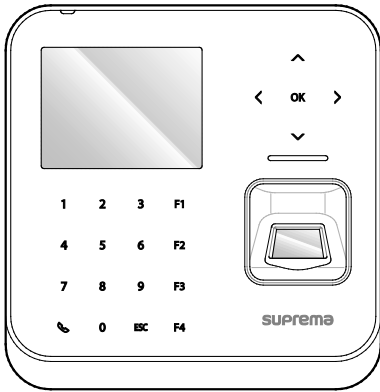

BioStation 2

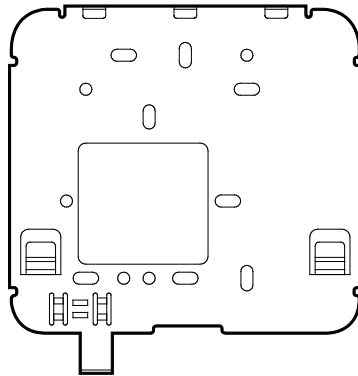


Wall Bracket

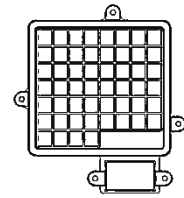


Cable Cover



Bracket Fixing Screw (Star Shaped)

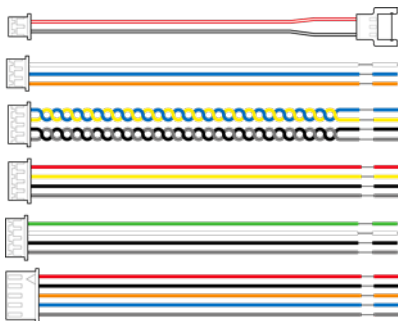

Connector Cables  
(1x2-pin, 1x3-pin, 3x4-pin, 1x5-pin)

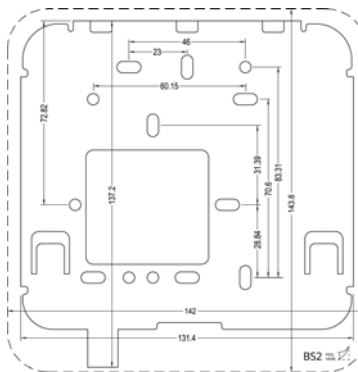

Drilling Template




Fixing Screws x4



Diode



Ferrite Core

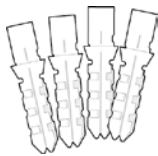

PVC Anchors x4



Open Source Software  
Guide




Quick Guide

**NOTE**

- The components may differ depending on where the product is installed.
- For more information on installation, visit the Suprema website ([www.supremainc.com](http://www.supremainc.com)) to see the installation guide.

## Parts

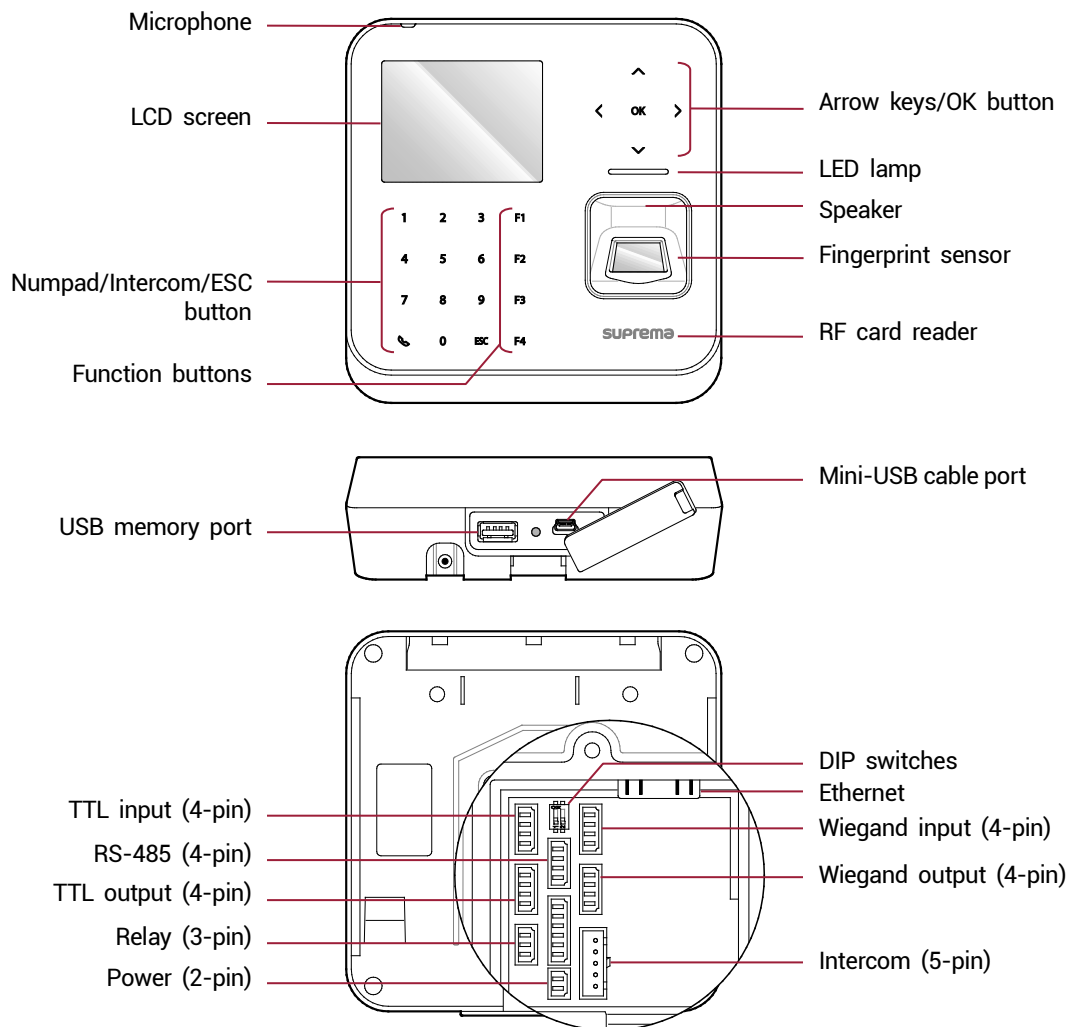

Name	Description
<b>Microphone</b>	Transmits the user's voice to the intercom.
<b>LCD screen</b>	Displays various information or settings.
<b>Numpad/Intercom/ESC button</b>	<ul style="list-style-type: none"> <li>• <b>1 to 9:</b> Enters numbers/characters or selects a menu item.</li> <li>• <b>☎:</b> Connects to the intercom.</li> <li>• <b>ESC:</b> Opens the menu, moves back to the previous screen, or cancels input</li> </ul>
<b>Function buttons</b>	Serves as T&A function key or selects a sub-menu item.
<b>Arrow keys/OK button</b>	<ul style="list-style-type: none"> <li>• <b>^:</b> Changes the character type.</li> <li>• <b>∨:</b> Changes the character type or selects a T&amp;A event.</li> <li>• <b>&lt;:</b> Deletes numbers/characters.</li> <li>• <b>&gt;:</b> Inserts symbols or configures an item.</li> <li>• <b>OK:</b> Selects an item or saves the settings.</li> </ul>
<b>Speaker</b>	Makes a sound.
<b>LED lamp</b>	Shows the status of the product with different colors.
<b>Fingerprint sensor</b>	Reads fingerprints.

<b>RF card reader</b>	Reads RF cards.
<b>USB memory port</b>	Connects a USB memory stick.
<b>Mini-USB cable port</b>	To be supported later.
<b>TTL input (4-pin)</b>	Connects a TTL input/output cable.
<b>RS-485 (4-pin)</b>	Connects an RS-485 cable.
<b>TTL output (4-pin)</b>	Connects a TTL input/output cable.
<b>Relay (3-pin)</b>	Connects a relay cable.
<b>Power (2-pin)</b>	Connects the power cable.
<b>DIP switch</b>	Turns on the termination resistor for the RS-485 interface <ul style="list-style-type: none"><li>• To use the termination resistor, set DIP switch 1 to ON.</li></ul>
<b>Ethernet</b>	Connects an Ethernet cable.
<b>Wiegand input (4-pin)</b>	Connects a Wiegand input/output cable.
<b>Wiegand output (4-pin)</b>	Connects a Wiegand input/output cable.
<b>Intercom (5-pin)</b>	Connects the intercom cable.



## Cables and connectors

### Power



Pin	Name	Color
1	PWR +VDC	Red (White stripe)
2	PWR GND	Black (White stripe)

### Relay



Pin	Name	Color
1	RLY NO	White
2	RLY COM	Blue
3	RLY NC	Orange

### RS-485



Pin	Name	Color
1	485 TRXP	Blue
2	485 TRXN	Yellow
3	485 GND	Black
4	SH GND	Gray

### TTL input/output



Pin	Name	Color
1	TTL IN0 / OUT0	Red
2	TTL IN1 / OUT1	Yellow
3	TTL GND	Black
4	SH GND	Gray

### Wiegand input/output



Pin	Name	Color
1	WG IN0 / OUT0	Green
2	WG IN1 / OUT1	White
3	WG GND	Black
4	SH GND	Gray

Intercom



Pin	Name	Color
1	INPH +VDC	Red
2	INPH GND	Black
3	INPH AUD	Orange
4	INPH DTA	Blue
5	SH GND	Gray

## How to Enroll a Fingerprint

Correct fingerprint enrollment is critical in improving fingerprint recognition. BioStation 2 is loaded with powerful fingerprint algorithm which is capable of recognizing a fingerprint even when the angle or position of the finger on the reader is not optimal. Nevertheless, enrolling a fingerprint with the following instructions can improve the recognition performance.


### Choose Ideal Fingers to Enroll

- Each person can enroll up to ten fingerprints. If a finger is injured or scratched, it is recommended to use another finger.
- If the fingerprint recognition fails, you can enroll the same finger multiple times, which will improve the recognition performance.
- If a finger is injured or the fingerprint is not clear, please enroll a different finger.
- The index finger and middle finger are preferred for enrolling fingerprints. Other fingers may have a lower recognition rate because those fingers tend to have difficulty being placed at the center of the fingerprint sensor.



### How to Enroll Fingerprints

- 1 When enrolling a fingerprint, the "Scan 1st finger" message will appear on the LCD screen. Place a finger on the fingerprint sensor, and then press softly in order to improve the recognition.

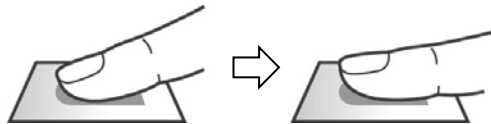

- 2 After a beep sounds, you will be notified to scan again then remove your finger and place it again to scan. (You are required to scan the same finger twice for enrollment.)

#### NOTE

##### Precautions for enrolling fingerprints

Enrolling fingerprints is the most important procedure because this device uses enrolled fingerprints to compare them with a scanned fingerprint. Please ensure the following when enrolling fingerprints:

- Place the finger firmly on the fingerprint sensor for it to be read completely.
- The center of the fingerprint should be placed at the center of the fingerprint sensor.
- If a finger is injured or the fingerprint is not clear, please enroll another finger.
- Follow the instructions on the screen and place the finger correctly without movement when the finger is read.
- Place your finger to completely cover the sensor with maximum surface.



##### When the fingerprint recognition fails

BioStation 2 can read fingerprints regardless of the change in seasons or condition of the fingers. However, the external environment or the finger's position can affect the recognition performance.


If the fingerprint recognition fails, the following actions are recommended.

- If there is water or sweat on the finger, please wipe it off before scanning the finger.
- If the finger is too dry, please blow softly on the fingertip before scanning the finger.
- If the finger is injured, please enroll another finger.
- If the fingerprint recognition failure persists, please follow 'Precautions for enrolling fingerprints' to re-enroll the fingerprint.

# Administrator Menus

## Full Menu

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Select the desired menu item.

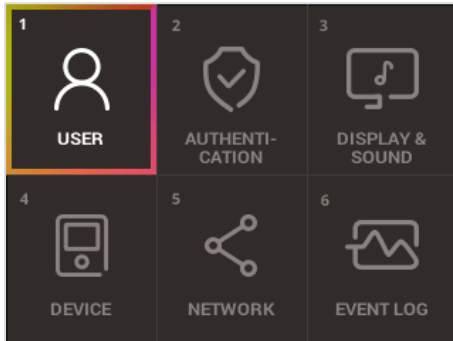


### NOTE

- If there is no administrator on the device, anyone can access the menu just by pressing the **ESC** button.

## Quick Menu

- 1 Press and hold the **ESC** button for more than one second and then release the button. Next, authenticate yourself as an administrator.
- 2 Select the desired menu item.

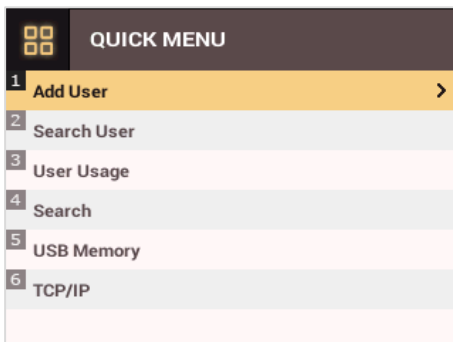

### NOTE

- If there is no administrator on the device, anyone can access the quick menu just by pressing and holding the **ESC** button and then releasing the button.

# User Management

## Add User Information

You can register the user information and fingerprints.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **USER > Add User** and press **OK**.

Add User	
ID	2
Name	
PIN	
Fingerprint	0
Card	0
User Level	None
Start Date	2001.01.01

- 3 Select an item then press the **>** button. Press **OK** after configuring the item to register the user information.
  - **ID:** Enter a number between 1 and 429467295 to register as the user ID. If **User ID Type** set to **Alphanumeric**, a combination of alphanumeric characters and symbols ( \_ - ) can be used for the ID. Up to 32 characters can be input.
  - **Name:** Enters the user name with the number buttons. Press the **^**/**v** buttons to switch between letters and numbers. Press **F1/F2** to show more letters.
  - **PIN:** Enters a PIN. Enter the PIN and press **OK**. Enter the PIN again to confirm it, then press the **OK** button. PIN numbers must be 4 to 16 digits to prevent leaking of the PIN.
  - **Fingerprint:** Enrolls fingerprints for user authentication. After scanning the fingerprint of the registered finger, the same finger should be scanned one more time. Press the **ESC** button if you do not want to enroll a fingerprint.
  - **Card:** Registers cards for user authentication. Scan the cards that you want to assign to users. Press the **ESC** button if you do not want to register another card.
  - **User Level:** Selects the privileges to assign to the user. Use the **</>** buttons to select the user level.
  - **Start Date:** Sets the start date for the user account. Press the number buttons to enter the date. Use the **<** button to delete the date. Use the **>** button to enter a separator.
  - **Expiration Date:** Sets the end date for the user account. Press the number buttons to enter the date. Use the **<** button to delete the date. Use the **>** button to enter a separator.
  - **Security Level:** Sets the security level for 1:1 Authentication.
  - **Duress:** Selects the index of the fingerprints to be used as duress fingerprints. This is available only when there are two or more registered fingerprints.
  - **Private Auth Mode:** Changes the authentication mode for each user. Select a desired item and press the **</>** buttons to change the settings.

### NOTE


The available menus vary depending on the selected user level.

- **None:** Indicates the level for normal users who cannot use the menu.
- **Administrator:** The user can use all menus.
- **Configuration:** The user can use **AUTHENTICATION, DISPLAY & SOUND, DEVICE, NETWORK,** and **EVENT LOG** menus.
- **User Mgmt:** The user can use **USER** and **EVENT LOG** menus.

## Edit User Information

Users with the user level of Administrator and User Mgmt can change user information. They can add fingerprints or a card for a user, and also change PIN numbers and access levels.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **USER > Search User** and press **OK**.

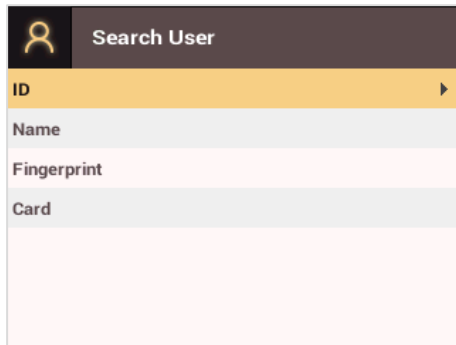

- 3 Select a search method and press the **>** button. You can search for users by **ID, Name, Fingerprint, or Card**.
  - If you press **OK** without selecting a search method, a list of all users will be displayed.
- 4 Select the user you want to edit and press **F2**. Edit the information by referring to **Adding User Information**.
  - Press **F3** and then the **OK** button to delete a user.

### NOTE

- **Access Group** can be registered in BioStar 2. For more information on registering access groups, see the BioStar 2 Administrator Guide.

## Delete All Users


You can delete all registered users.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **USER > Delete User**, then press **OK**.
- 3 If you press **OK**, all registered users will be deleted.

## Check User Usage

Shows the numbers of registered users, fingerprints, and cards.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **USER > User Usage**, then press **OK**.

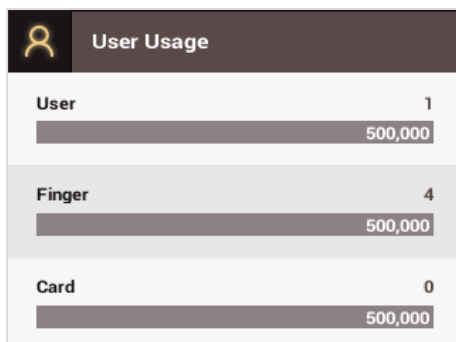





# Authentication Configuration

## Finger

A schedule can be configured for each authentication method using fingerprints.

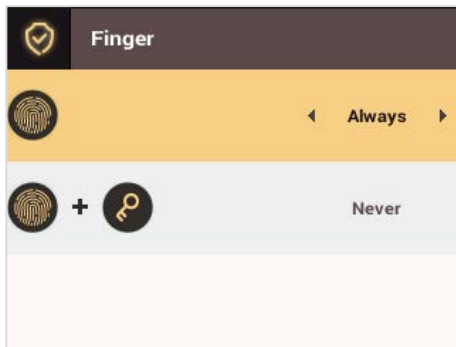- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **AUTHENTICATION > Finger**, then press **OK**.



- 3 Select an item and press the </> buttons to set a schedule.
  - : This mode only uses fingerprints.
  -  + : In this mode, a PIN must be entered after fingerprint authentication.
- 4 Press **OK** to save the settings.


### NOTE









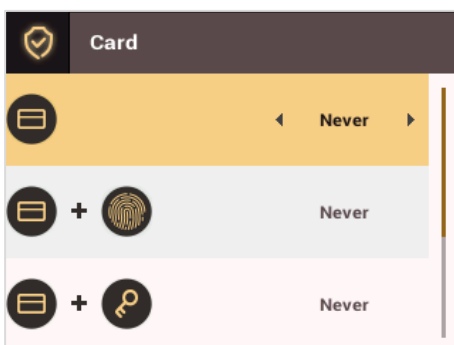


- You can configure a schedule in BioStar 2. You can select **Never** or **Always** if there is no configured schedule.
- For more information on configuring schedules, see the BioStar 2 Administrator Guide.

## Card

A schedule can be configured for each authentication method using cards.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **AUTHENTICATION > Card**, then press **OK**.



- 3 Select an item and press the </> buttons to set a schedule.
  - : This mode only uses a card.
  -  + : In this mode, fingerprint authentication is required after card authentication.
  -  + : In this mode, a PIN must be entered after card authentication.
  -  +  / : In this mode, fingerprint authentication or entering a PIN is required after card authentication.
  -  +  + : In this mode, both fingerprint authentication and entering a PIN are required after card authentication.
- 4 Press **OK** to save the settings.


**NOTE**

- You can configure a schedule with BioStar 2. You can select **Never** or **Always** if there is no configured schedule.
- For more information on configuring schedules, see the BioStar 2 Administrator Guide.

**ID**

A schedule can be configured for each authentication method using IDs.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **AUTHENTICATION > ID**, then press **OK**.

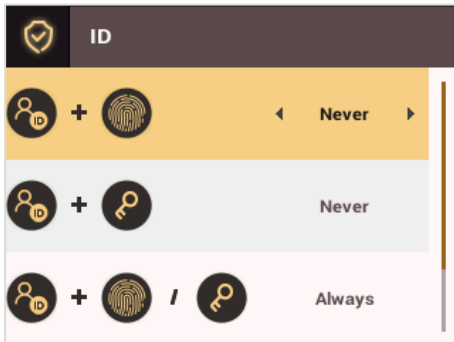

- 3 Select an item and press the **</>** buttons to set a schedule.
  - + : In this mode, fingerprint authentication is required after entering an ID.
  - + : In this mode, a PIN must be entered after entering an ID.
  - + / : In this mode, fingerprint authentication or entering a PIN is required after entering an ID.
  - + + : In this mode, both fingerprint authentication and entering a PIN are required after entering an ID.
- 4 Press **OK** to save the settings.


**NOTE**

- You can configure a schedule with BioStar 2. You can select **Never** or **Always** if there is no configured schedule.
- For more information on configuring schedules, see the BioStar 2 Administrator Guide.

**T&A Mode**

You can select registration options for the T&A Mode.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **AUTHENTICATION > T&A Mode**, then press **OK**.

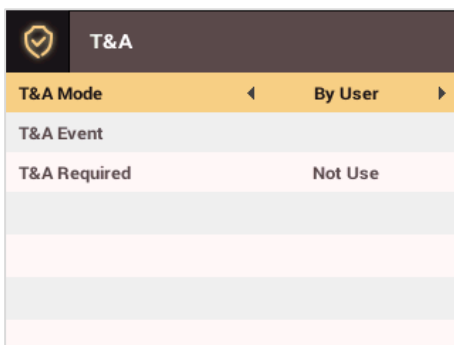

- 3 Select an item and configure the settings.
  - **T&A Mode:** Selects how to use the T&A Mode.
  - **T&A Event:** Checks T&A Events.
  - **T&A Required:** Selects the registration option for the T&A Mode. If **Use** is selected, you can set the T&A Event as a required option to select during authentication.




- 4 Press **OK** to save the settings.

## Fingerprint

You can configure the fingerprint authentication settings.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **AUTHENTICATION > Fingerprint**, then press **OK**.

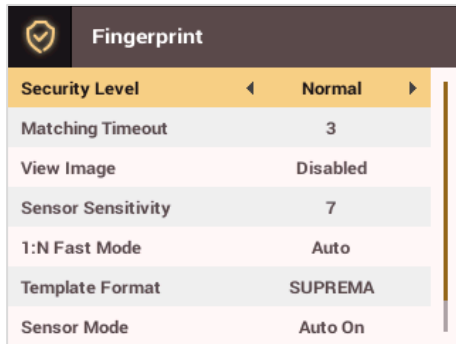

- 3 Select an item and press the **</>** buttons to change the settings.
  - **Security Level:** Configures the security level for 1:N Authentication.
  - **Timeout:** Sets a timeout period. If the authentication is not completed within the set time, the authentication fails.
  - **View Image:** You can view the original image when a fingerprint is scanned.
  - **Sensor Sensitivity:** Sets the sensitivity level of the fingerprint reader sensor. Set the sensor sensitivity high if you wish to use a higher sensor sensitivity level and obtain more detailed fingerprint information.
  - **1:N Fast Mode:** Sets the fingerprint authentication speed. Select **Auto On** to have the authentication speed configured according to the total fingerprint templates enrolled on the device.
  - **Template Format:** Sets the fingerprint template format. The default format is SUPREMA. Be careful when changing the template format as it can render all previously stored fingerprints unusable.
  - **Sensor Mode:** If **Auto On** is selected, the fingerprint sensor detects if a finger is present. And the sensor is on while the finger is present on the sensor. If **Always On** is selected, the fingerprint sensor is always on.
  - **Advanced Enrollment:** You can check the quality of a scanned fingerprint to save high quality fingerprint data. If **Enabled** is selected, the user will be notified when the fingerprint quality is low. This helps users to scan the fingerprints correctly.
- 4 Press **OK** to save the settings.

### NOTE


- Change the template type after deleting all user fingerprint information. If there is any user fingerprint information stored on the device, the template type cannot be changed.

# System Setup

## Display & Sound

You can configure the display and sound settings on the device.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DISPLAY & SOUND**, then press **OK**.

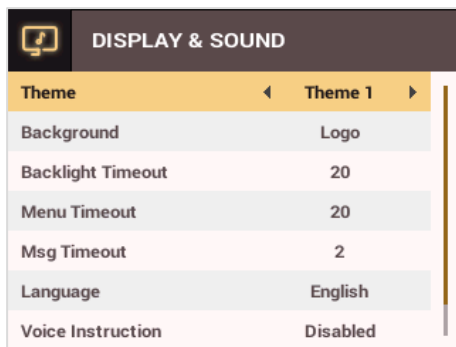

DISPLAY & SOUND	
Theme	Theme 1
Background	Logo
Backlight Timeout	20
Menu Timeout	20
Msg Timeout	2
Language	English
Voice Instruction	Disabled


- 3 Select an item and press the **</>** buttons to change the settings.
  - **Theme:** Changes the style of the home screen.
  - **Background:** Selects items to display on the home screen background.
  - **Backlight Timeout:** Configures how long (in seconds) the LCD screen light stays on.
  - **Menu Timeout:** Configures the time (in seconds) for the menu screen to automatically disappear. If there is no button input for the specified period, the display goes back to the home screen.
  - **Msg Timeout:** Configures the time (in seconds) for the configuration completion message or notification message to automatically disappear.
  - **Language:** Selects the language to use.
  - **Voice Instruction:** You can use voice instructions instead of beep.
  - **Volume:** Adjusts the volume.
- 4 Press **OK** to save the settings.

## Device

### Date & Time

You can configure the date and time settings. Be sure to correctly configure the settings to collect accurate log data.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Date & Time**, then press **OK**.

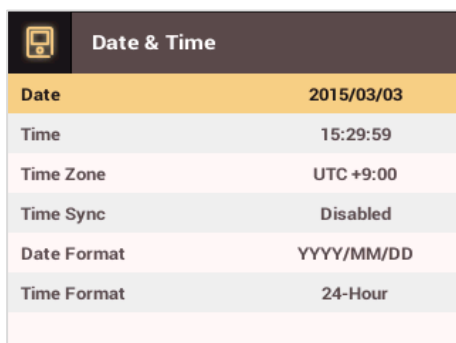

Date & Time	
Date	2015/03/03
Time	15:29:59
Time Zone	UTC +9:00
Time Sync	Disabled
Date Format	YYYY/MM/DD
Time Format	24-Hour

- 3 Select an item and press the **</>** buttons to change the settings.
  - **Date:** Sets the current date. Press the number buttons to enter the date.
  - **Time:** Sets the current time. Press the number buttons to enter the time.
  - **Time Zone:** Sets the time zone for your area.

- **Time Sync:** Synchronizes the time with the server. To synchronize the time with the server, select **Use**.
- **Date Format:** Selects the date format. You can select from among the **YYYY/MM/DD**, **MM/DD/YYYY**, or **DD/MM/YYYY** formats.
- **Time Format:** Selects the time format. You can select from among the **24 hour** or **12 hour (AM/PM)** formats.

**NOTE**

- Press the number buttons to enter the **date** and **time**. Use the **<** button to delete the values entered. Use the **>** button to enter a separator.

**Daylight Saving Time**


You can use the device by applying daylight saving time. Set the start and end time correctly.

- 1 Press **ESC** and authenticate with the Admin level credential.
- 2 Select **DEVICE > Daylight Saving Time**, then press **OK**.
- 3 Select an item and press the **</>** buttons to change the settings.
- 4 To save settings, press **OK**.

**User ID Type**

You can set the type of user ID to be registered on the device to Number or Alphanumeric characters.

- 1 Press **ESC** and authenticate with the Admin level credential.
- 2 Select **DEVICE > User ID Type**, then press **OK**.

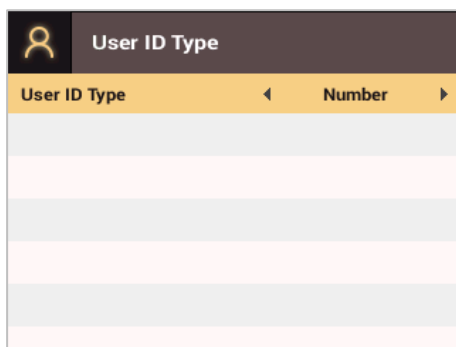


- 3 Press the **</>** buttons to change the settings.
- 4 To save settings, press **OK**.
- 5 Press **OK** to save the settings.

**USB Memory**

By connecting a USB memory stick, you can import or export the log, data and configurations data to or from the USB memory stick and upgrade the firmware.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > USB Memory**, then press **OK**.

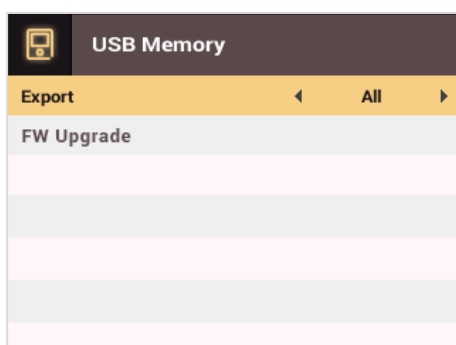

### 3 Select an item and change the settings.

- **Export:** Selects data to export to the connected USB memory stick. Press the </> buttons to select an item and press **OK**.
- **FW Upgrade:** If there are firmware files stored on the USB memory stick, select the firmware file to use and press **OK** to upgrade the firmware.

#### NOTE


Supported USB memory sticks are as follows. If you use other memory sticks, they may not work properly.

- Samsung Electronics: SUM-LSB 8 GB, SUM-PSB 8 GB, SUM-PSB 16 GB, and SUM-BSG 32 GB
- LG Electronics: XTICK J3 WINDY 8 GB, SMART USB MU1 White 8 GB, MU 1 USB 32 GB, MU28GBC 32 GB, XTICK MOBY J1 16 GB
- SanDisk: Cruzer 16 GB, Cruzer Blade CZ50 4 GB, Cruzer Blade CZ50 32 GB, CZ48 Ultra USB 3.0 64 GB, CZ80 USB3.0 64 GB, CZ52 64 GB, Cruzer Glide Z60 128 GB, Cruzer Force CZ71 32 GB
- Sony: Micro Vault Click 8 GB, MicroVault CLICK 16 GB, USM-SA1 32 GB
- Transcend: JetFlash 760 8 GB, JetFlash 760 32 GB, JetFlash 500 8 GB
- Memorette: MINI500 8 GB
- A-DATA: S102 PRO 8 GB
- TriGem: Pastel 8 GB

## Restart Device

The user can restart the device.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Restart Device**, then press **OK**.

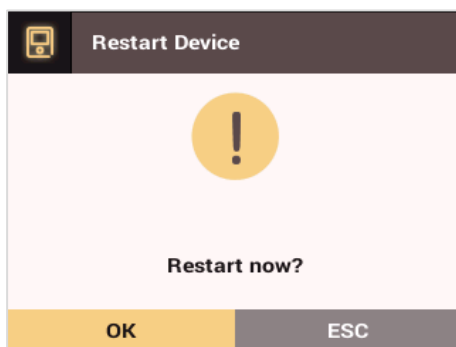

- 3 Press **OK** to restart the device. Press **ESC** to cancel.

## Restore Default

Device settings, network settings, and operator levels will be reset.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Restore Default**, then press **OK**.
  - **Reset All Settings:** You can reset all settings stored on the device. Press **OK** to reset all device settings. To cancel, press **ESC**.
  - **Reset without Network Settings:** You can reset all settings except network settings. Press **OK** to reset all settings except network settings. To cancel, press **ESC**.
  - **Factory Default:** You can delete all the information saved in the device and the root certificate and restore default settings.
  - **Delete the Root Certificate:** You can delete the root certificate saved in the device.
- 3 If you proceed to restore the defaults, the device will restart.

#### NOTE

- When you reset, the operator level will be reset as well. After resetting, make sure to set the operator level again.
- Language setting will not change after resetting.
- **Factory Default** menu can be used when the root certificate is saved in the device.
- **Delete the Root Certificate** menu can be used only when the root certificate is saved in the device and Administrator has been designated.

## More Settings

### Relay


You can set the open time and the input port of the exit button in the device. This option is useful when the device is used as a standalone.

- 1 Press **ESC** and authenticate with the Admin level credential.
- 2 Select **DEVICE > Relay**, then press **OK**.
  - **Relay**: You can set whether relay is enabled or not. To set the open time and the input port of the exit button, set to **Enabled**.
  - **Open Time**: Set the duration for the door to remain open when standard user authentication has been carried out.
  - **Exit Button**: Select the input port where the exit button is connected.
- 3 To save settings, press **OK**.

### Intercom

You can select whether or not to use the intercom.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Interphone**, then press **OK**.

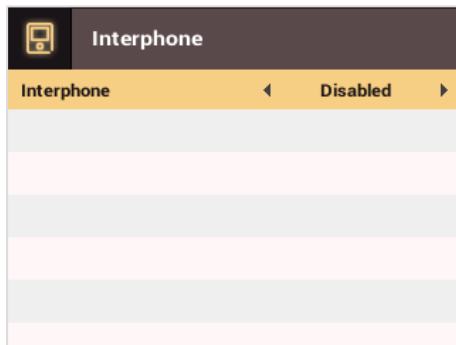

- 3 When the intercom is connected, press the **</>** buttons to select **Enabled**.

### Secure Tamper

When the tamper is turned on, you can set to delete the entire user, the entire log, and the security key.

- 1 Press **ESC** and authenticate with the Admin level credential.
- 2 Select **DEVICE > Secure Tamper**, then change the settings by pressing **< 4** or **6 >**.
- 3 To save settings, press **OK**.

### Device Info


Shows the model name, device ID, FW version, and MAC address.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Device Info**, then press **OK**.
  - Shows the model name, device ID, HW / FW / Kernel versions and Ethernet/WiFi MAC addresses.
- 3 Check the device information and press **OK**.

## Memory Info

Shows the memory usage status.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **DEVICE > Memory Info**, then press **OK**.

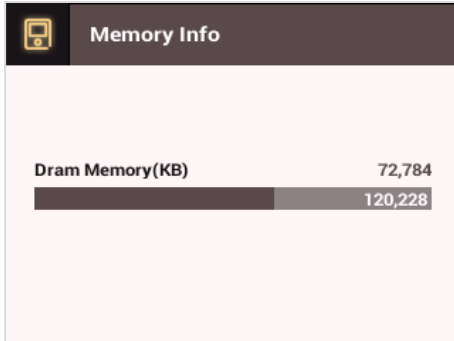

- 3 Check the memory information and press **OK**.

## Network

### TCP/IP Settings

You can configure the network settings for the device.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **NETWORK > TCP/IP** then press **OK**.
- 3 Press the **</>** buttons to select a **Type** then select an item. You can select **Ethernet** or **Wireless**.

TCP/IP	
Type	Ethernet
PORT	51211
DHCP	Enabled
IP Address	192.168.16.141
Gateway	192.168.16.1
Subnet Mask	255.255.255.0

TCP/IP	
Type	Wireless
AP Search	MKNexus5
Encryption	None
Password	
PORT	51211
DHCP	Enabled
IP Address	192.168.16.141

- **Port:** Enter the port number of the device.
- **DHCP:** Select whether or not to use DHCP. If **Disabled** is selected, the user can modify **IP Address**, **Gateway**, and **Subnet Mask**.
- **IP Address:** Enter the IP address of the device.
- **Gateway:** Enter the gateway address of the device.
- **Subnet Mask:** Enter the subnet mask address of the device.
- **AP Search:** Select the AP to connect to.
- **Encryption:** Shows the encryption method of the AP.
- **Password:** Enter the AP login password.
- **Port:** Enter the port number of the device.
- **DHCP:** Select whether or not to use DHCP. If **Disabled** is selected, the user can modify the **IP Address**.
- **IP Address:** Enter the IP address of the device.

- 4 Press **OK** to save the settings.

#### NOTE

- Press the number buttons to enter the IP address, gateway address, and subnet mask address. Use the **<** button to delete the values entered. Use the **>** button to enter a separator.
- To use **Wireless**, you need a wireless router. For more information on installing and configuring the wireless router, see the manual of the wireless router.

### Server Settings

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **NETWORK > Server** then press **OK**.

Server	
Connection Mode	Server > Device
Server URL	
Server IP	0.0.0.0
Server Port	51212

- 3 Select an item and change the settings.
  - **Connection Mode:** Select **Device > Server** to send the connect signal from the device directly to the server. If **Server > Device** is selected, **Server IP** and **Server Port** address cannot be entered.

- **Server URL:** Enter the BioStar 2 server's URL instead of **Server IP**. You can enter the values when **Device > Server** is selected for **Connection Mode**.
- **Server IP:** Enter the IP address of the PC where BioStar 2 is installed. You can enter the values when **Device > Server** is selected for **Connection Mode**.
- **Server Port:** Enter the port address of the PC with BioStar 2 installed. You can enter the values when **Device > Server** is selected for **Connection Mode**.


**4** Press **OK** to save the settings.

#### NOTE

- Press the number buttons to enter the values for **Server IP** and **Server Port**. Use the **<** button to delete the values entered. Use the **>** button to enter a separator.

## RS-485 Settings

- 1** Press the **ESC** button then authenticate as an administrator.
- 2** Go to **NETWORK > RS-485** then press **OK**.

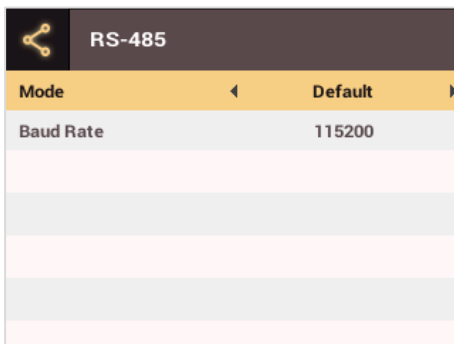

- 3** Select an item and press the **</>** buttons to change the settings.
  - **Mode:** Select RS-485 mode.
  - **Baud Rate:** Select a baud rate.
- 4** Press **OK** to save the settings.



# Check Event Log

## Search Logs

You can search logs after setting the condition.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **EVENT LOG > Search** then press **OK**.


Search	
Start Date	2015.3.3
Start Time	00:00:00
End Date	2015.3.3
End Time	23:59:59
Event	All
T&A Event	All
User ID	

- 3 Select an item and press the </> buttons to change the condition. If you press **OK**, matching logs will be displayed on the screen.
- 4 Press **ESC** to return to the previous screen.

## Delete All Logs

You can delete all logs stored on the device.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **EVENT LOG > Delete All** then press **OK**.


Delete Logs	
	
<p><b>Are you sure to delete all logs?</b></p>	
<b>OK</b>	<b>ESC</b>

- 3 Press **OK** to delete all logs. Press **ESC** to cancel.

## Check Log Usage

Shows the status of the log usage.

- 1 Press the **ESC** button then authenticate as an administrator.
- 2 Go to **EVENT LOG > Log Usage** then press **OK**.

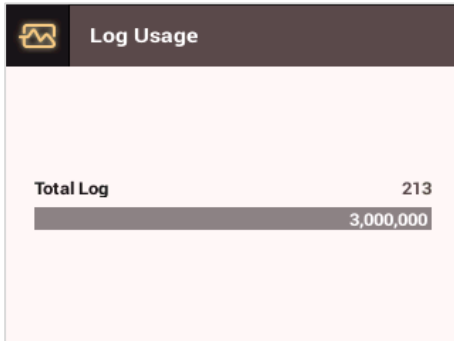

- 3 Press **OK** after checking the log usage.

# Troubleshooting

## Checklist Before Requesting Service

Category	Problem	Possible Causes & Remedy
<b>Power</b>	Power is supplied to the device, but the device does not work.	<ul style="list-style-type: none"> <li>• If the terminal is apart from the bracket, it may not work due to the tamper switch.</li> <li>• Check the adapter or power connection cable.</li> </ul>
<b>PIN</b>	I've lost my PIN.	<ul style="list-style-type: none"> <li>• For a normal user's PIN, contact your administrator and then enter the PIN again.</li> <li>• If an administration's PIN is lost, contact your installer.</li> </ul>
	I cannot open a locked door when I enter a PIN and then press the OK button.	<ul style="list-style-type: none"> <li>• Check whether the registered PIN is entered correctly.</li> <li>• Check whether the PIN has recently been changed.</li> <li>• If you cannot find the PIN, contact your administrator to change the PIN.</li> </ul>
<b>Fingerprint</b>	A fingerprint is enrolled successfully, but the fingerprint recognition fails too often.	<ul style="list-style-type: none"> <li>• Refer to '<b>How to Register Fingerprints</b>', and then enroll the fingerprint again.</li> <li>• Since there are variations in recognition rates due to the different characteristics of each fingerprint, please try to enroll another fingerprint.</li> <li>• If there are many number of enrolled fingerprints, change the <b>Matching Timeout</b> setting and then try again.</li> <li>• If a finger is injured, the finger may be recognized as another person's finger.</li> </ul>
	The fingerprint recognition does not work.	<ul style="list-style-type: none"> <li>• Check whether the finger or the fingerprint sensor has sweat, water, or dust on it, and then wipe it clear.</li> <li>• Try again after clearing the finger and the fingerprint sensor with a dry cloth.</li> <li>• If the finger is too dry, try again after blowing gently on the finger.</li> </ul>
	The fingerprint sensor does not turn on.	<ul style="list-style-type: none"> <li>• When <b>Sensor Mode</b> set to <b>Auto On</b>, the fingerprint sensor detects if a finger is present. And the sensor is on while the finger is present on the sensor. If you want to keep the fingerprint sensor on, go to <b>AUTHENTICATION &gt; Fingerprint &gt; Sensor Mode</b> and then select <b>Always On</b>.</li> </ul>
<b>Door lock</b>	The lock does not work when the door is closed.	<ul style="list-style-type: none"> <li>• The electric lock may have a problem. Ask your installer to examine it.</li> </ul>
<b>Time</b>	The time displayed on the device is not correct.	<ul style="list-style-type: none"> <li>• Even though BioStation 2 includes an internal battery, the time could become incorrect due to the discharge of the internal battery if power has not been applied to the system for a long time. Refer to <b>Date &amp; Time</b> to adjust the time.</li> </ul>
<b>Administrator Connection</b>	The administrator mode cannot be accessed due to losing the administrator PIN.	<ul style="list-style-type: none"> <li>• Since BioStation 2 administrators are in charge of permitting the right of entrance, only the administrators can access the menu.</li> <li>• If the administrator menu cannot be accessed, it is possible to get a PIN issued in accordance with a predefined procedure. Ask your installer about the procedure to issue a password.</li> </ul>



# Product Specifications

Category	Feature	Specification
Main	Biometric	Fingerprint
	IP Rating	IP 65
	RF Option*	<ul style="list-style-type: none"> <li>BS2-OMPW: 13.56Mhz MIFARE, MIFARE Plus, DESFire/EV1, FeliCa, NFC</li> <li>BS2-OIPW: 13.56MHz iCLASS SE/SR/Seos</li> <li>BS2-OHPW: 125kHz HID Prox</li> <li>BS2-OEPW: 125kHz EM</li> </ul>
Capacity	Max. User (1:1)	500,000
	Max. User (1:N)	20,000
	Max. Template (1:1)	1,000,000 (Two templates per finger)
	Max. Template (1:N)	40,000 (Two templates per finger)
	Max. Text Log	3,000,000
Interface	Wi-Fi	Yes
	TCP/IP	Yes
	RS-485	1ch Host or Slave (Selectable)
	Wiegand	1ch Input, 1ch Output
	TTL Input	2ch Inputs, 2ch Outputs
	Relay	1 Relay
	USB	USB 2.0 (Host)
Relay	Voltage	Max. 24VDC
	Current	0.5A, Max. 1.A
Hardware	CPU	1.0 GHz
	Memory	8GB Flash + 256 MB RAM
	LCD	2.8" QVGA Color LCD
	LED	Multi-Color
	Sound	16-bit Hi-Fi
	Operating Temp.	-20°C ~ 50°C
	Tamper	Yes
	Power	9V ~ 18V
	PoE	Optional
	Dimensions (W x H x D mm)	142 x 144 x 45(38)
	Certificates	CE, FCC, KC, RoHS, REACH, WEEE

\* For detailed information on our supported card list, contact Suprema technical support team at [support@supremainc.com](mailto:support@supremainc.com).

## Dimensions

(Unit: mm)

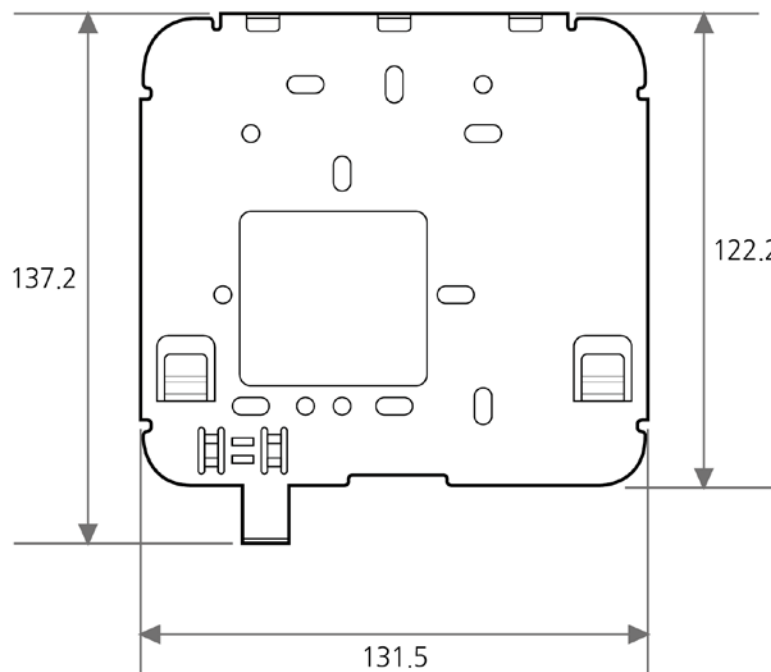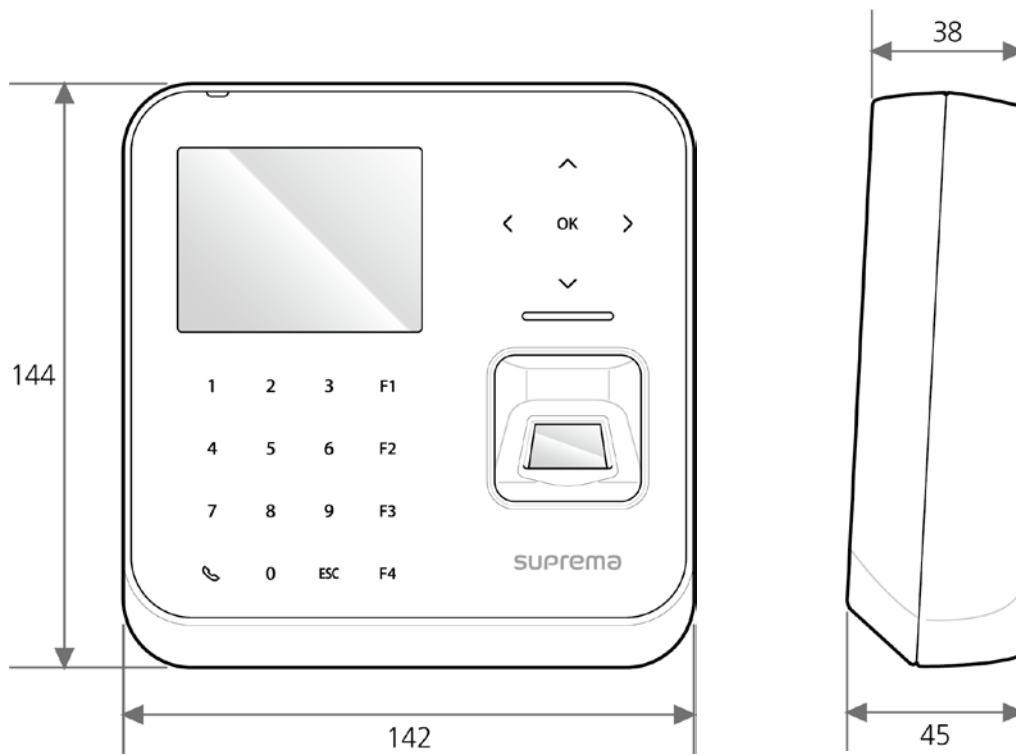

## FCC Compliance Information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications of the product not expressly approved by the manufacturer could void the user's authority to operate the equipment according to the FCC Rules.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20 cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

# Appendices

## Disclaimers

- The information contained in this Guide is provided in regard to the Suprema product.
- Your right of usage is recognized only for products included in sales agreements and conditions guaranteed by Suprema. No license rights over other intellectual properties mentioned in this Guide are recognized.
- Suprema makes no representations or warranties concerning infringement of patents, copyrights or other intellectual property rights as well as merchantability and fitness of the product for a particular purpose in regard to the sale or use of the Suprema product.
- Do not use the Suprema product in medical, life-saving and life-sustaining situations or in situations where malfunction of the product could lead to personal injury or loss of life. However, if an accident occurs while the purchaser is using the product in any of the situations stated above, even if shortcomings are discovered in the design or production process of the product and are claimed as a point of major negligence, employees, subsidiaries, branches, affiliates, or distributors of Suprema shall not be liable and shall not make reimbursements for any direct or indirect costs or expenses associated, including lawyer fees.
- Suprema may change the product standards and specifications at any time without any adequate notice for improvements in stability, performance or design of the product. Designers should keep in mind that features or descriptions marked as "to be implemented" or "to be defined" are always subject to change. Suprema will implement or define such features or descriptions in the near future and shall not be liable for any consequential problems, including problems of compatibility.
- If you wish to obtain the latest specification documentation before you place an order for the product, please contact Suprema, a sales agent of Suprema, or a regional distributor.

## Copyright Notice

Suprema owns the copyright for this document. The rights of other product names, brands, and trademarks belong to the individuals or organizations who own them.

## Open Source License

- The software of this product is based on "Linux Kernel 3.x", which is licensed under GPL. As for GPL, please refer to the [GNU General Public License](#) in this manual.
- This product uses the "glibc" library, which is licensed under LGPL. As for LGPL, please refer to the [GNU Lesser General Public License](#) in this manual.
- This product uses the "QT" library, which is licensed under LGPL. As for LGPL, please refer to the [GNU Lesser General Public License](#) in this manual.
- This product uses the "OpenSSL", which is licensed under the OpenSSL and Original SSLeay licenses. As for the OpenSSL and Original SSLeay licenses, please refer to [OpenSSL License](#) and [Original SSLeay License](#) in this manual.
- To request the modified source code based on Linux Kernel 3.x and the source code of glibc and QT libraries, which are included in this product, please contact us at [tech@supremainc.com](mailto:tech@supremainc.com).

## GNU General Public License

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure

that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

## **TERMS AND CONDITIONS**

### **0. Definitions.**

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

### **1. Source Code.**

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that



language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

## 2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

## 3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

## 4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

## 5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not

- invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

## 6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## 7. Additional Terms.

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

### **8. Termination.**

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

### **9. Acceptance Not Required for Having Copies.**

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

### **10. Automatic Licensing of Downstream Recipients.**

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that

transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

### **11. Patents.**

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

### **12. No Surrender of Others' Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

### **13. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

### **14. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time.

Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License “or any later version” applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy’s public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

#### **15. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

#### **16. Limitation of Liability.**

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **17. Interpretation of Sections 15 and 16.**

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

## **GNU Lesser General Public License**

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

This version of the GNU Lesser General Public License incorporates the terms and conditions of version 3 of the GNU General Public License, supplemented by the additional permissions listed below.

### **0. Additional Definitions.**

As used herein, “this License” refers to version 3 of the GNU Lesser General Public License, and the “GNU GPL” refers to version 3 of the GNU General Public License.

“The Library” refers to a covered work governed by this License, other than an Application or a Combined Work as defined below.

An “Application” is any work that makes use of an interface provided by the Library, but which is not otherwise based on the Library. Defining a subclass of a class defined by the Library is deemed a mode of using an interface provided by the Library.

A “Combined Work” is a work produced by combining or linking an Application with the Library. The particular version of the Library with which the Combined Work was made is also called the “Linked Version”.

The “Minimal Corresponding Source” for a Combined Work means the Corresponding Source for the Combined Work, excluding any source code for portions of the Combined Work that, considered in isolation, are based on the Application, and not on the Linked Version.

The “Corresponding Application Code” for a Combined Work means the object code and/or source code for the Application, including any data and utility programs needed for reproducing the Combined Work from the Application, but excluding the System Libraries of the Combined Work.

### **1. Exception to Section 3 of the GNU GPL.**

You may convey a covered work under sections 3 and 4 of this License without being bound by section 3 of the GNU GPL.

## 2. Conveying Modified Versions.

If you modify a copy of the Library, and, in your modifications, a facility refers to a function or data to be supplied by an Application that uses the facility (other than as an argument passed when the facility is invoked), then you may convey a copy of the modified version:

- a) under this License, provided that you make a good faith effort to ensure that, in the event an Application does not supply the function or data, the facility still operates, and performs whatever part of its purpose remains meaningful, or
- b) under the GNU GPL, with none of the additional permissions of this License applicable to that copy.

## 3. Object Code Incorporating Material from Library Header Files.

The object code form of an Application may incorporate material from a header file that is part of the Library. You may convey such object code under terms of your choice, provided that, if the incorporated material is not limited to numerical parameters, data structure layouts and accessors, or small macros, inline functions and templates (ten or fewer lines in length), you do both of the following:

- a) Give prominent notice with each copy of the object code that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the object code with a copy of the GNU GPL and this license document.

## 4. Combined Works.

You may convey a Combined Work under terms of your choice that, taken together, effectively do not restrict modification of the portions of the Library contained in the Combined Work and reverse engineering for debugging such modifications, if you also do each of the following:

- a) Give prominent notice with each copy of the Combined Work that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the Combined Work with a copy of the GNU GPL and this license document.
- c) For a Combined Work that displays copyright notices during execution, include the copyright notice for the Library among these notices, as well as a reference directing the user to the copies of the GNU GPL and this license document.
- d) Do one of the following:
  - 0) Convey the Minimal Corresponding Source under the terms of this License, and the Corresponding Application Code in a form suitable for, and under terms that permit, the user to recombine or relink the Application with a modified version of the Linked Version to produce a modified Combined Work, in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.
  - 1) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (a) uses at run time a copy of the Library already present on the user's computer system, and (b) will operate properly with a modified version of the Library that is interface-compatible with the Linked Version.
- e) Provide Installation Information, but only if you would otherwise be required to provide such information under section 6 of the GNU GPL, and only to the extent that such information is necessary to install and execute a modified version of the Combined Work produced by recombining or relinking the Application with a modified version of the Linked Version. (If you use option 4d0, the Installation Information must accompany the Minimal Corresponding Source and Corresponding Application Code. If you use option 4d1, you must provide the Installation Information in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.)

## 5. Combined Libraries.

You may place library facilities that are a work based on the Library side by side in a single library together with other library facilities that are not Applications and are not covered by this License, and convey such a combined library under terms of your choice, if you do both of the following:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities, conveyed under the terms of this License.
- b) Give prominent notice with the combined library that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

## 6. Revised Versions of the GNU Lesser General Public License.

The Free Software Foundation may publish revised and/or new versions of the GNU Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library as you received it specifies that a certain numbered version of the GNU Lesser General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that published version or of any later version published by the Free Software Foundation. If the Library as you received it does not specify a version number of the GNU Lesser General Public License, you may choose any version of the GNU Lesser General Public License ever published by the Free Software Foundation.

If the Library as you received it specifies that a proxy can decide whether future versions of the GNU Lesser General Public License shall apply, that proxy's public statement of acceptance of any version is permanent authorization for you to choose that version for the Library.

## OpenSSL License

Copyright (c) 1998-2017 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

## Original SSLeay License

Copyright (C) 1995-1998 Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)) All rights reserved.

This package is an SSL implementation written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com))" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com))"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY

WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]



The logo for Suprema Inc. features the word "suprema" in a white, lowercase, sans-serif font. Below it, the words "BIOMETRICS & SECURITY" are written in a smaller, all-caps, sans-serif font. The entire logo is set against a dark red rectangular background.

**suprema**  
BIOMETRICS & SECURITY

**Suprema Inc.**

16F Parkview Tower, 248, Jeongjail-ro, Bundang- gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA  
Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: [sales@supremainc.com](mailto:sales@supremainc.com)

©2018 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status and/or specifications are subject to change without notice.