# Door Module INSTALLATION GUIDE

Version 1.4 English EN 101.00.DM-20 V1.4A



# **CONTENTS**

Safety information	2	Product Specifications	12
Instructional icons	2	Dimensions	13
Introduction	4	FCC compliance information	14
Components	4		
Name of each part	5	Appendices	15
Installation Example	6	Disclaimers	15
		Copyright Notice	15
Installation	7		
Mounting the Bracket	7		
Mounting the Spacer	7		
Power connection	8		
RS-485 connection	8		
Fail Safe Lock	9		
Fail Secure Lock	9		
Wiegand	10		
Door button	11		
Door sensor	11		

# **Safety information**

Please read this safety instructions before you use the product to prevent injury to yourself and others and to prevent property damage. The term 'product' in this manual refers to the product and any items provided with the product.

## **Instructional icons**



Warning: This symbol indicates situations that could result in death or severe injury.



Caution: This symbol indicates situations that may result in moderate injury or property damage.



**Note**: This symbol indicates notes or additional information.



## Warning

## **Installation**

#### Do not install or repair the product arbitrarily.

- This may result in electric shock, fire, or product damage.
- · Damages caused by any modifications or failure to follow installation instructions can void the manufacturer's warranty.

#### Do not install the product in a place with direct sunlight, moisture, dust, soot, or a gas leak.

• This may result in electric shock or fire.

### Do not install the product in a location with heat from an electric heater.

• This may result in fire due to overheating.

#### Install the product in a dry location.

• Humidity and liquids may result in electric shock or product damage.

### Do not install the product in a location where it will be affected by radio frequencies.

• This may result in fire or product damage.

## **Operation**

#### Keep the product dry.

• Humidity and liquids may result in electric shock, fire, or product damage.

#### Do not use damaged power supply adapters, plugs, or loose electrical sockets.

• Unsecured connections may cause electric shock or fire.

#### Do not bend or damage the power cord.

• This may result in electric shock or fire.



#### **Installation**

Do not install the power supply cable in a location where people pass by.

• This may result in injury or product damage.

Do not install the product near magnetic objects, such as a magnet, TV, monitor (especially CRT), or speaker.

• The product may malfunction.

Use the IEC/EN 62368-1 approved power adapter that supports higher power consumption than the product. It is highly recommended to use the power adapter sold by Suprema.

- If the right power supply is not used, the product may malfunction.
- Refer to the Power in the product specifications for maximum current consumption specifications.

## **Operation**

Do not drop the product or cause impacts to the product.

• The product may malfunction.

Do not press buttons on the product by force or do not press them with a sharp tool.

• The product may malfunction.

#### When cleaning the product, mind the following.


- Wipe the product with a clean and dry towel.
- If you need to sanitize the product, moisten the cloth or the wipe with a proper amount of rubbing alcohol and gently clean all exposed surfaces including the fingerprint sensor. Use rubbing alcohol (containing 70% Isopropyl alcohol) and a clean, non-abrasive cloth like lens wipe.
- Do not apply liquid directly to the surface of the product.

Do not use the product for anything other than its intended use.

• The product may malfunction.

# **Introduction**

## **Components**

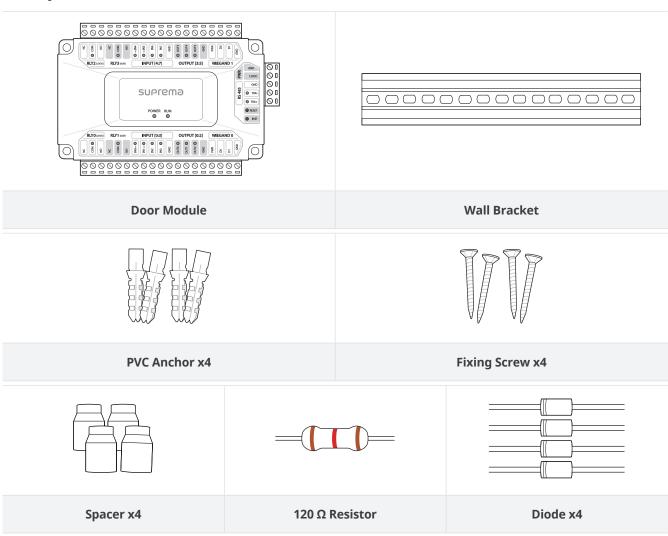



Components may vary according to the installation environment.

## Name of each part

Input 4 ~ 7 (Includes Supervised Input) Relay3 (Aux) Output 3 ~ 5 Wiegand 1 Relay2 (Lock) Power suprema RS-485 Operation status indicator **RESET button** Power status INIT button OUTPUT [0:2] WIEGAND 0 Relay0 (Lock) Wiegand 0 Relay1 (Aux) -Output 0 ~ 2 Input 0 ~ 3 (Includes Supervised Input)




- Press INIT button to reset DM-20 interworking with a device and then connect to another device.
- If you use the supervised input, refer to below details for LED status.
  - Orange: Open
  - Red: Short
  - Green: On
  - Off: Off

## **Installation Example**

DM-20 is connected with various I/O and Wiegand and can be compatible with 3rd party device.

It can be used supervised input, a supervised connection is a four-state connection to determine if the connection is Open, Short, On, Off.

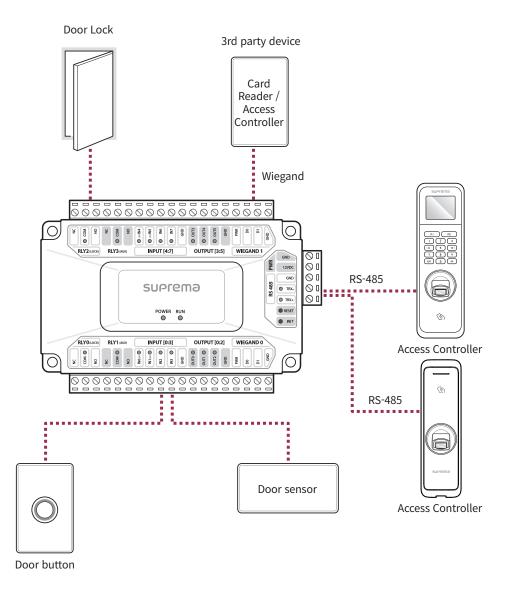

## **Installation**


DM-20 can be mounted with bracket or spacer.

## **Mounting the Bracket**

1 With the fixing screws for the bracket, mount the bracket firmly onto the surface where DM-20 is to be installed.




- If DM-20 should be installed onto a concrete wall, make a hole with a drill, and then insert a PVC anchor into the hole before screwing the fixing screw.
- 2 Attach DM-20 onto the mounted bracket.

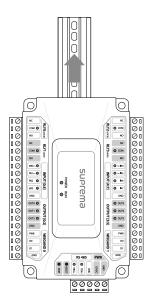

## **Mounting the Spacer**

1 With the fixing screws and spacers for DM-20, mount the bracket firmly onto the surface where DM-20 is to be installed.

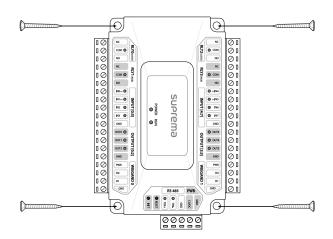




• If DM-20 should be installed onto a concrete wall, make a hole with a drill, and then insert a PVC anchor into the hole before screwing the fixing screw.


## **Power connection**

- Do not share the power with the access controller.
- Use the IEC/EN 62368-1 approved power adapter that supports higher power consumption than the product. If you wish to connect and use another device to the power supply adapter, you should use an adapter with a current capacity which is the same or larger than the total power consumption required for the terminal and another device.
  - Refer to the Power in the product specifications for maximum current consumption specifications.
- DO NOT extend the length of power cable when using the power adapter.

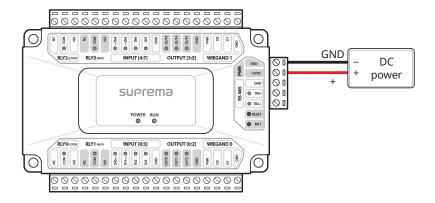

## **RS-485** connection

- RS-485 should be AWG24, twisted pair, and maximum length is 1.2 km.
- Connect a termination resistor (120Ω) to both ends of a RS-485 daisy chain connection. It should be installed at both ends of the daisy chain. If it is installed in the middle of the chain, the performance in communicating will deteriorate because it reduces the signal level.
- Up to 31 card readers or up to 7 fingerprint devices with 24 card readers can be connected with DM-20. (If Xpass set to master device, fingerprint devices cannot be connected as slave device.)

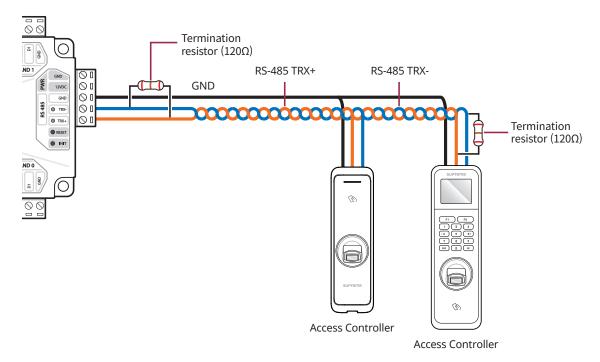


## Relay

### **Fail Safe Lock**

In order to use the Fail Safe Lock, connect the N/C relay as shown in the figure below. There is normally a current flowing through the relay for the Fail Safe Lock. When the relay is activated, blocking the current flow, the door will open. If the power supply to the product is cut off due to a power failure or an external factor, the door will open.



• Connect a diode to both ends of the power input as shown in the figure below when installing a deadbolt or a door strike. Make sure to connect the Cathode (direction to the stripe) to the + part of the power while paying attention to the direction of the diode.

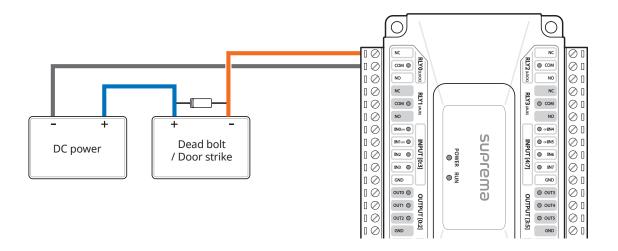


## **Fail Secure Lock**

In order to use the Fail Secure Lock, connect N/O relay as shown in the figure below. There is normally no current flowing through the relay for the Fail Secure Lock. When the current flow is activated by the relay, the door will open. If the power supply to the product is cut off due to a power failure or an external factor, the door will lock.




• Connect a diode to both ends of the power input as shown in the figure below when installing a deadbolt or a door strike. Make sure to connect the Cathode (direction to the stripe) to the + part of the power while paying attention to the direction of diode.

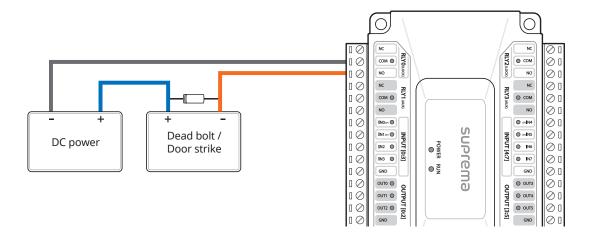

## Wiegand

If the power is shared by Wiegand devices, it is recommended to connect 12V and 2.5 A to DM-20.

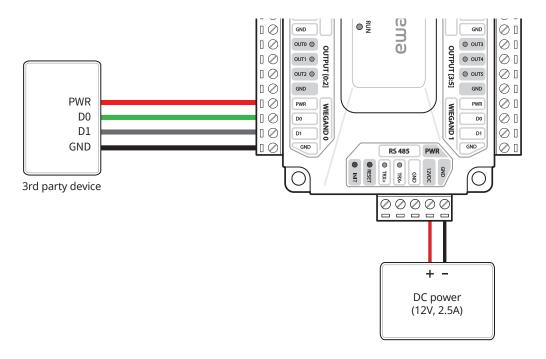




• You can use 12V, Max. 1.5A for Wiegand devices. If you connect a device that needs 1.0A to **WIEGAND 0**, **WIEGAND 1** deliver only 500mA.


## **Door button**

IN0(SP), IN1(SP), IN4(SP), IN5(SP) terminals support the supervised input, and it operates always as N/C(normally closed). If you want to connect with non-supervised input, use IN2, IN3, IN6, IN7 terminals.

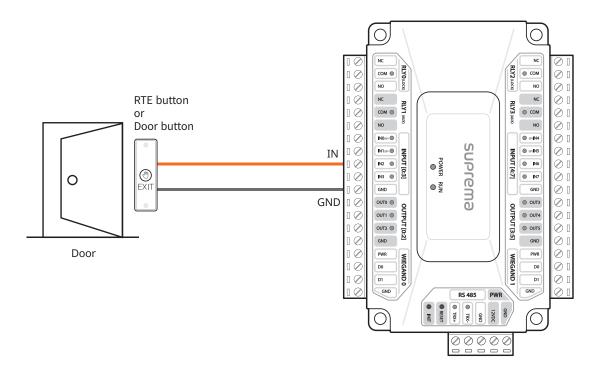

## **Door sensor**

IN0(SP), IN1(SP), IN4(SP), IN5(SP) terminals support the supervised input, and it operates always as N/C(normally closed). If you want to connect with non-supervised input, use IN2, IN3, IN6, IN7 terminals.

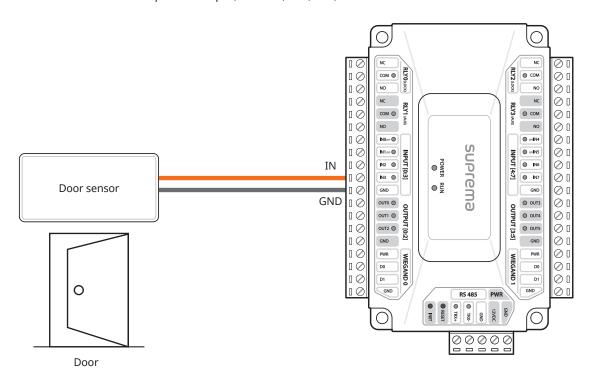


# **Product Specifications**

Category	Feature	Specification
General	Model	DM-20
	CPU	Cortex M3 72 MHz
	Memory	128 KB Flash, 20 KB SRAM
	LED	Multi-color Power x1 Relay x4 TTL Input x4 Supervised Input x4 TTL Output x6 RS-485 x2 Run x1
	Operating temperature	-20 °C ~ 60 °C
	Storage temperature	-40 °C ~ 70 °C
	Operating humidity	0 % ~ 80 %, non-condensing
	Storage humidity	0 % ~ 90 %, non-condensing
	Dimension (W x H x D)	130 x 90.5 x 35.8 (mm)
	Certificates	CE, UKCA, KC, FCC, RoHS, REACH, WEEE
Interface	RS-485	1 ch
	TTL Input	<ul><li>TTL Input 4 ch</li><li>Supervised Input 4 ch</li></ul>
	Output	TTL Output 6 ch
	Relay	4 relays
	Wiegand	<ul><li>Wiegand Input 2 ch</li><li>Voltage: 12 Vdc</li><li>Current: Max. 1.5 A</li></ul>
Electrical	Power	<ul><li>Voltage: 12 Vdc</li><li>Current: Max. 3.1 A</li></ul>
	Relay	2 A @ 30 VDC Resistive load 1 A @ 30 VDC Inductive load

## **Dimensions**

 $\label{eq:continuous} \mbox{(Unit: mm)} $$\ $$$$ $$$$ $$$  The tolerance is  $\pm 0.3 \ mm.$ 

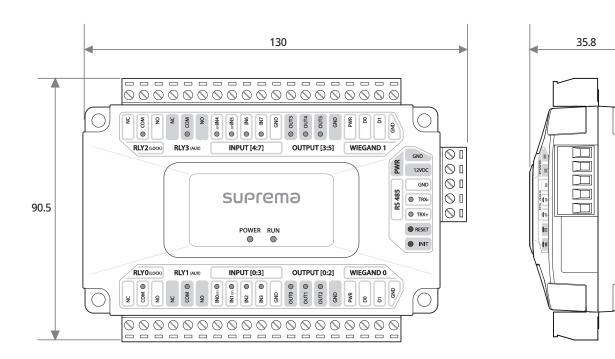

# **FCC compliance information**

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.
- **Modifications**: Any modifications made to this device that are not approved by Suprema Inc. may void the authority granted to the user by the FCC to operate this equipment.

## **Appendices**

## **Disclaimers**

- Information in this document is provided in connection with Suprema products.
- The right to use is acknowledged only for Suprema products included in the terms and conditions of use or sale for such products guaranteed by Suprema. No license, express or implied, by estoppel or otherwise, to any intellectual property is granted by this document.
- Except as expressly stated in an agreement between you and Suprema, Suprema assumes no liability whatsoever, and Suprema disclaims all warranties, express or implied including, without limitation, relating to fitness for a particular purpose, merchantability, or noninfringement.
- All warranties are VOID if Suprema products have been: 1) improperly installed or where the serial numbers, warranty date or quality assurance decals on the hardware are altered or removed; 2) used in a manner other than as authorized by Suprema; 3) modified, altered, or repaired by a party other than Suprema or a party authorized by Suprema; or 4) operated or maintained in unsuitable environmental conditions.
- Suprema products are not intended for use in medical, lifesaving, life-sustaining applications, or other applications in which the failure of the Suprema product could create a situation where personal injury or death may occur. Should you purchase or use Suprema products for any such unintended or unauthorized application, you shall indemnify and hold Suprema and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Suprema was negligent regarding the design or manufacture of the part.
- Suprema reserves the right to make changes to specifications and product descriptions at any time without notice to improve reliability, function, or design.
- Personal information, in the form of authentication messages and other relative information, may be stored within Suprema products during usage. Suprema does not take responsibility for any information, including personal information, stored within Suprema's products that are not within Suprema's direct control or as stated by the relevant terms and conditions. When any stored information, including personal information, is used, it is the responsibility of the product users to comply with national legislation (such as GDPR) and to ensure proper handling and processing.
- You must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Suprema reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.
- Except as expressly set forth herein, to the maximum extent permitted by law, the Suprema products are sold "as is".
- Contact your local Suprema sales office or your distributor to obtain the latest specifications and before placing your product order.

## **Copyright Notice**

Suprema has the copyright of this document. The rights of other product names, brands, and trademarks belong to individuals or organizations who own them..



#### Suprema Inc.

17F Parkview Tower, 248, Jeongjail-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: sales\_sys@supremainc.com



For more information about Suprema's global branch offices, visit the webpage below by scanning the QR code.

http://www.supremainc.com/en/about/contact-us.asp

© 2023 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status and/or specifications are subject to change without notice.